



Hold -open arm installation diagram

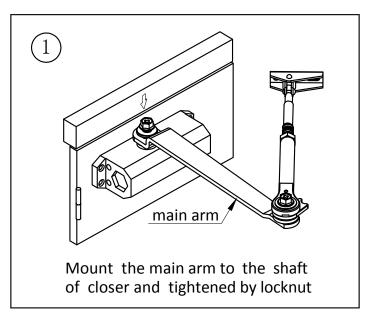

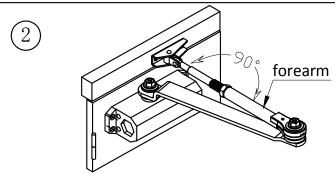


Adjust the length of forearm. To attach forearm to the door frame at 90° angle in accordance with the installation dimensions. Fix the foot in the corresponding position of door frame(the door should be closed), then tightened the locknut

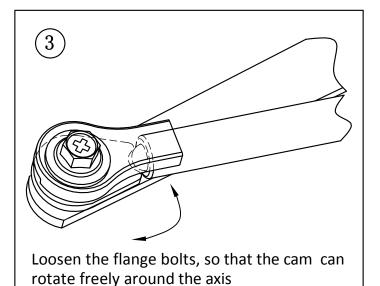

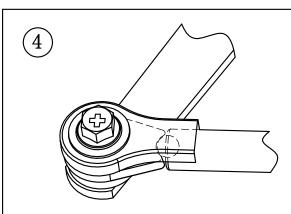

Opened the door to the desired hold -open position .Ensure the notch in cam and main arm seat' are properly engaged (to prevent slipping). Tighten the flange bolts by wrench .

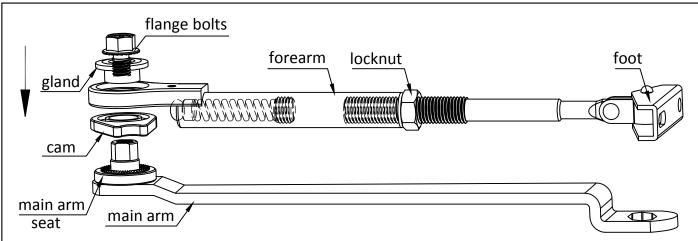

- 1. Orientation angle has been set between 90°-100°
- 2. If the orientation angle want to reset, please first loosen the flange bolts ,then fix the door at the desired hold -open position and finally tightened the flange bolts will be ok .

Note:

Do not push the door, or may do damage to the door or hinge