



MOTIONS

 
OPENING SOLUTIONS

TELESCOPIC GATE





SIDE MOUNTING






> BOTTOM MOUNTING: Setting the first leaf

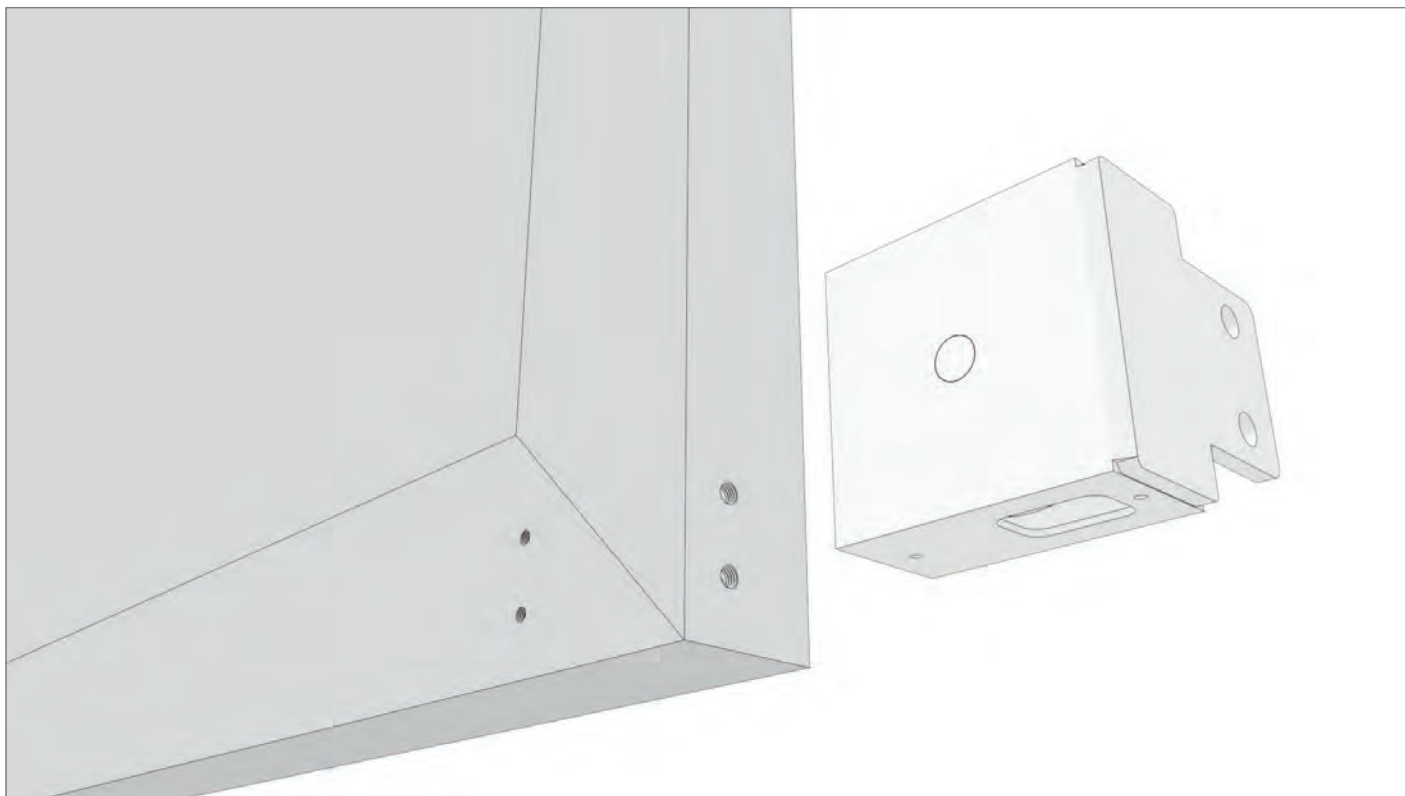

    Fix or weld onto the two sides of the gate the boxes with the pulley.

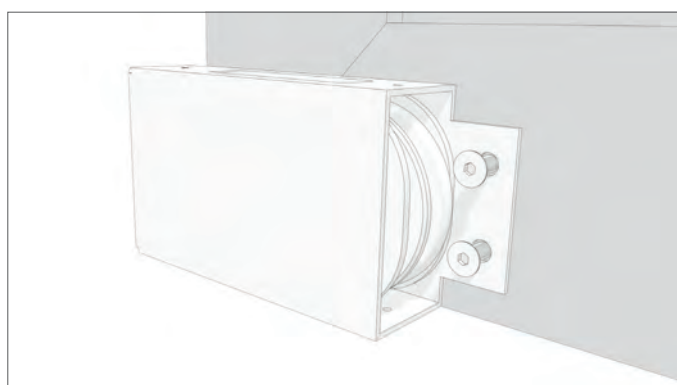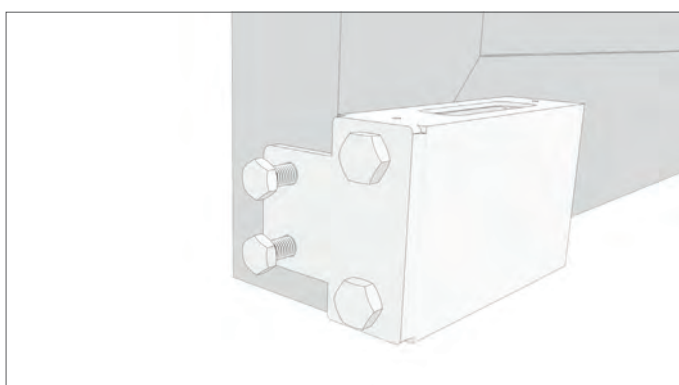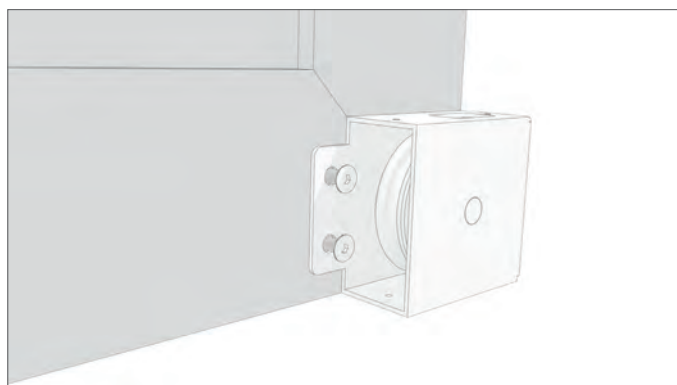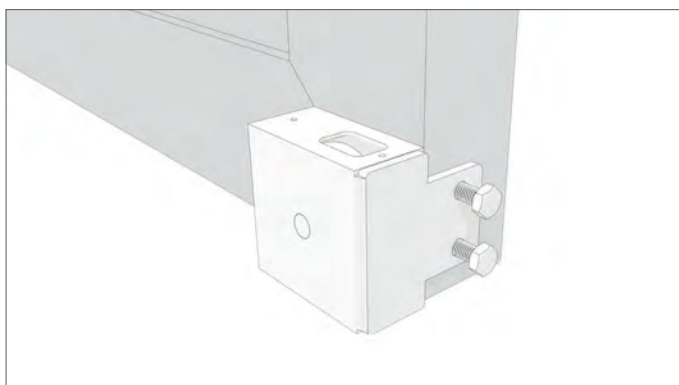

Fix the upper guide to the first leaf.

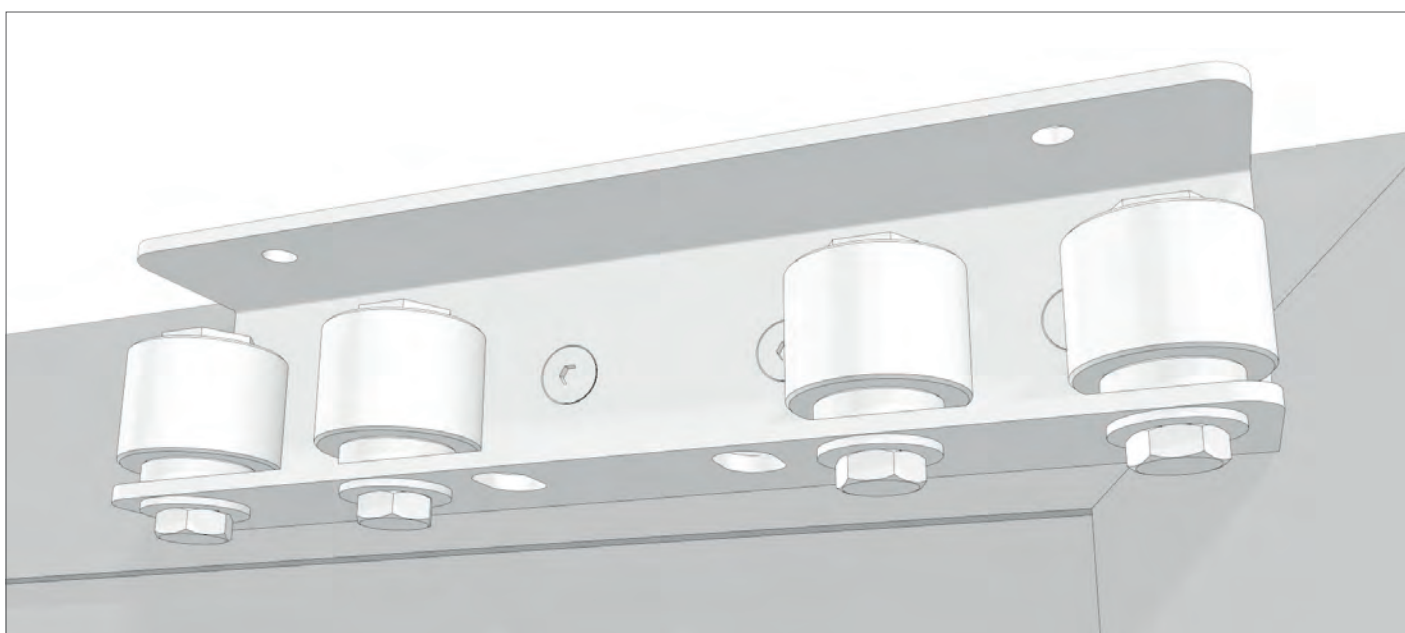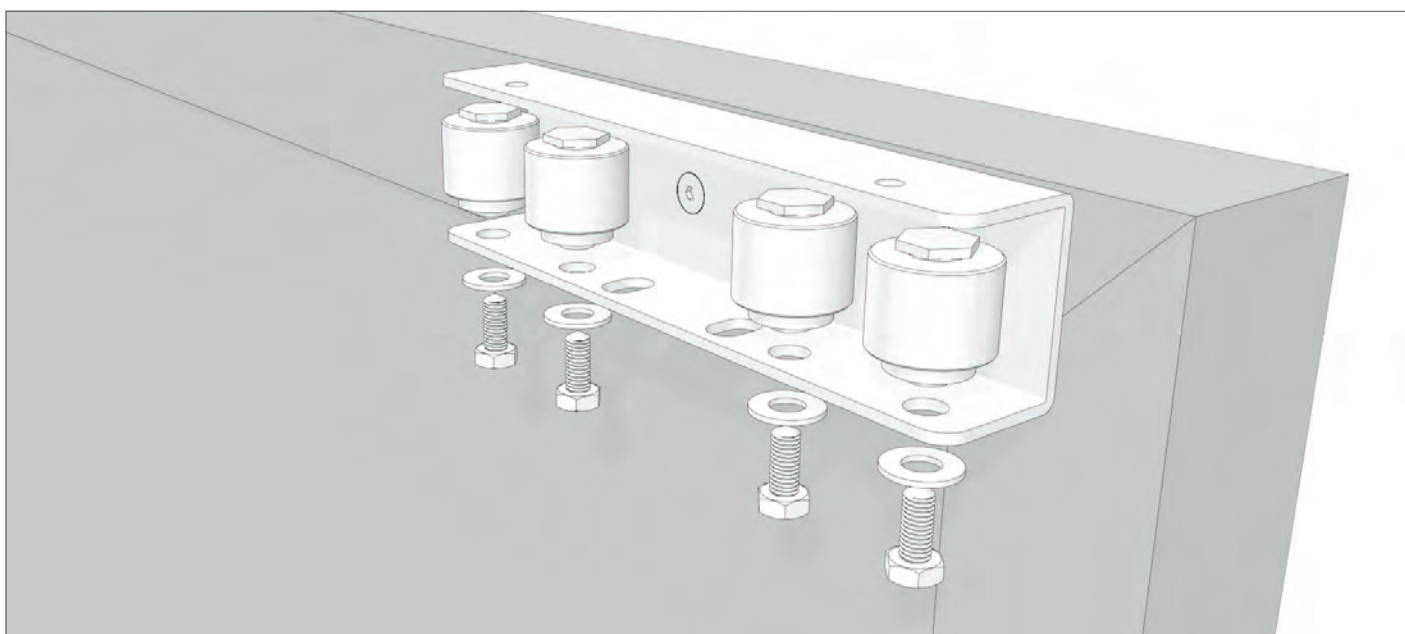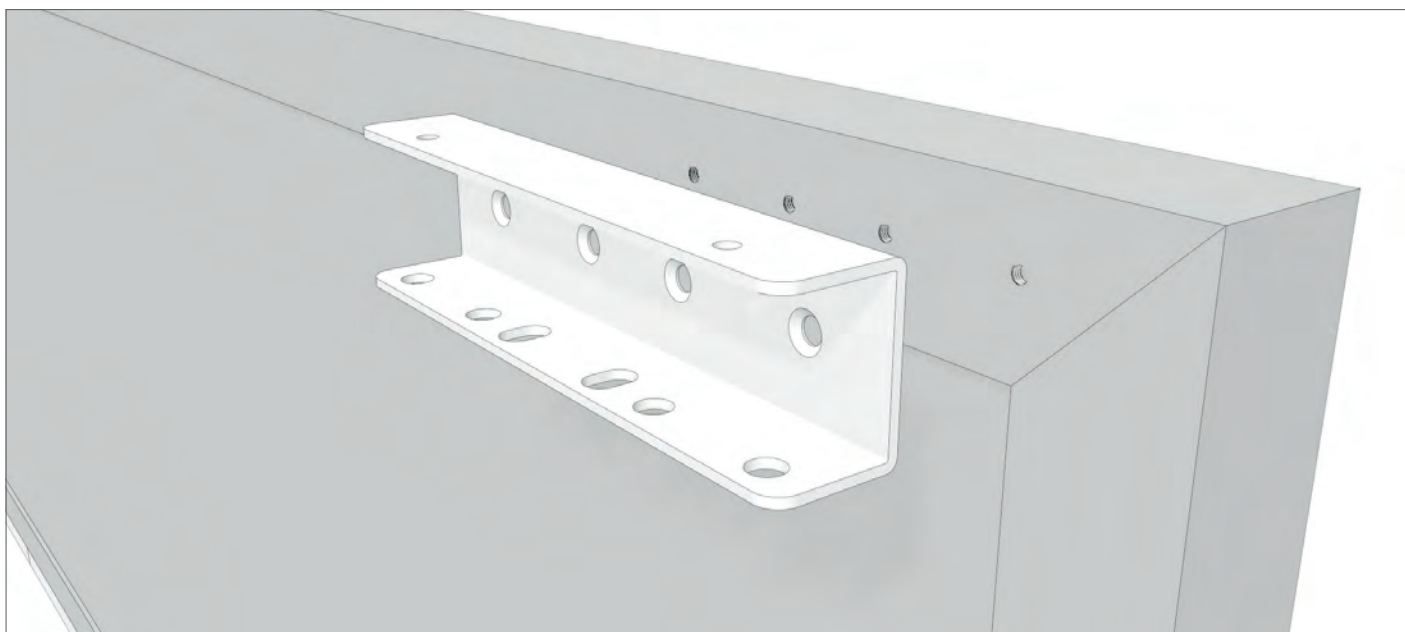   




> **BOTTOM MOUNTING:** Setting the second leaf


Fix or weld the guiding profile to the second leaf.



 
Set the bracket onto the back side of the second leaf.

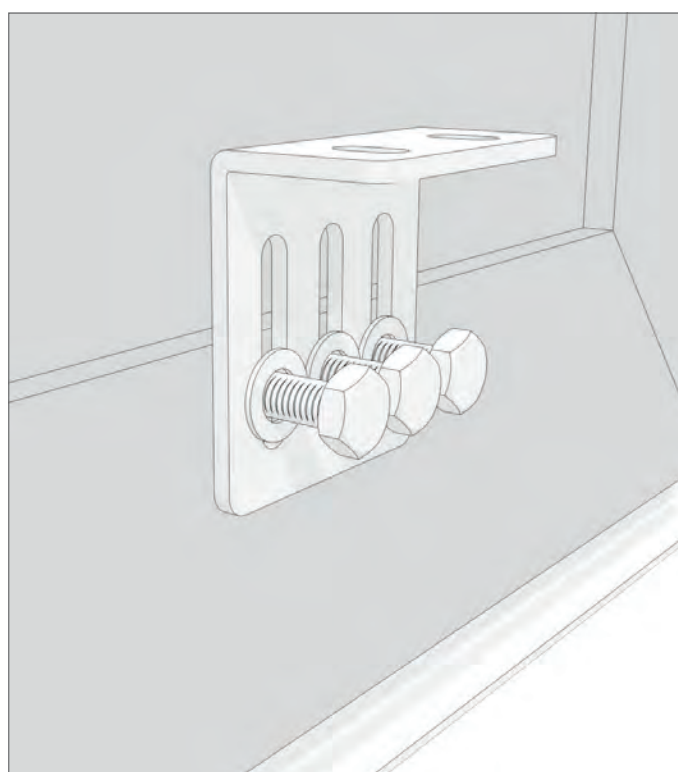




Fix the cover caps of the profile.

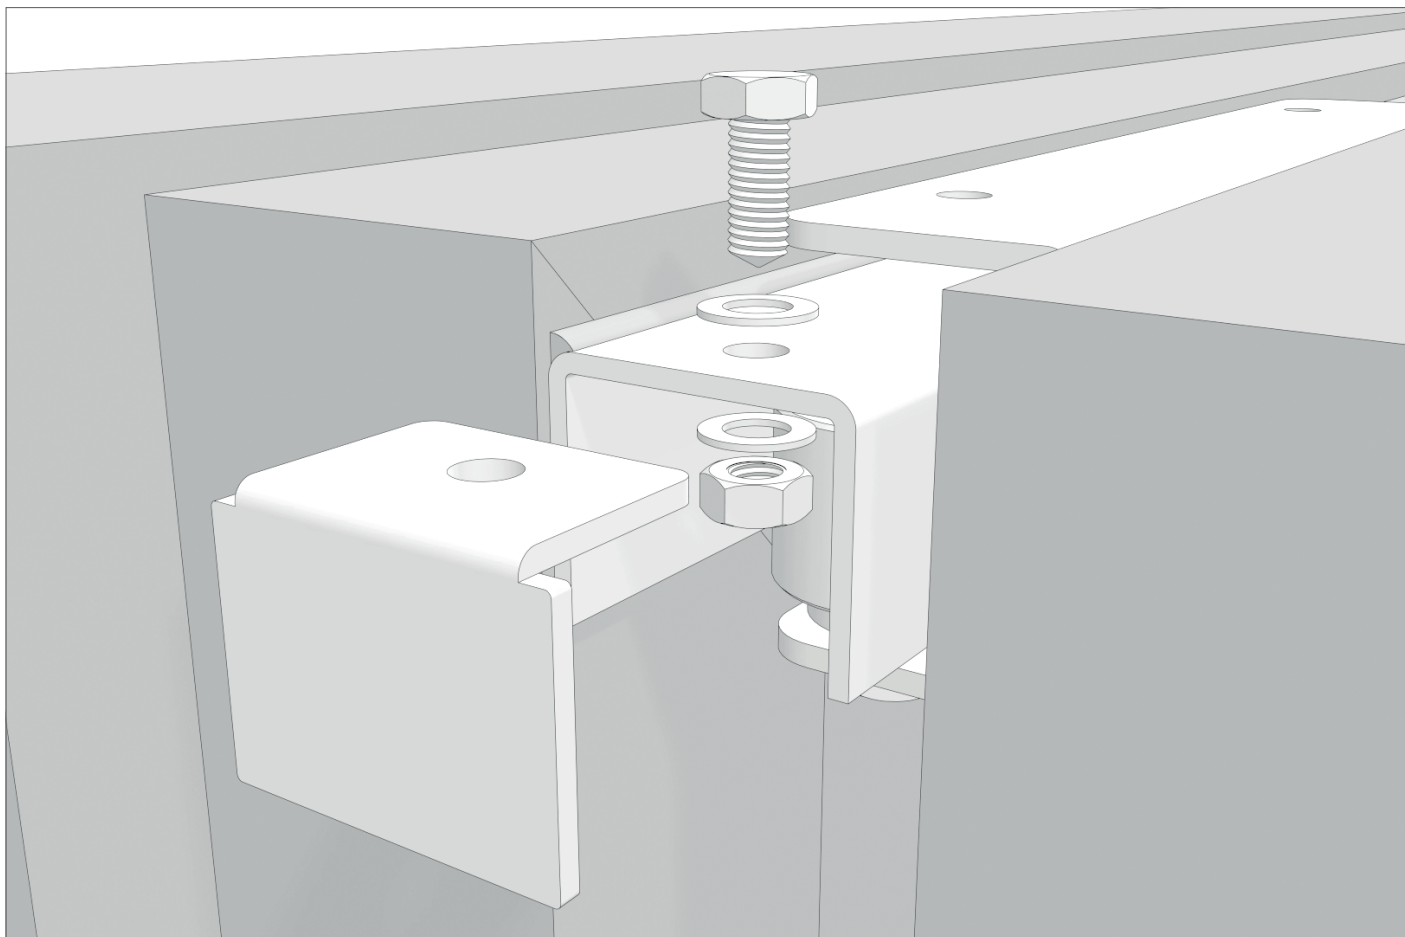 




Loose the adjustable pulley.

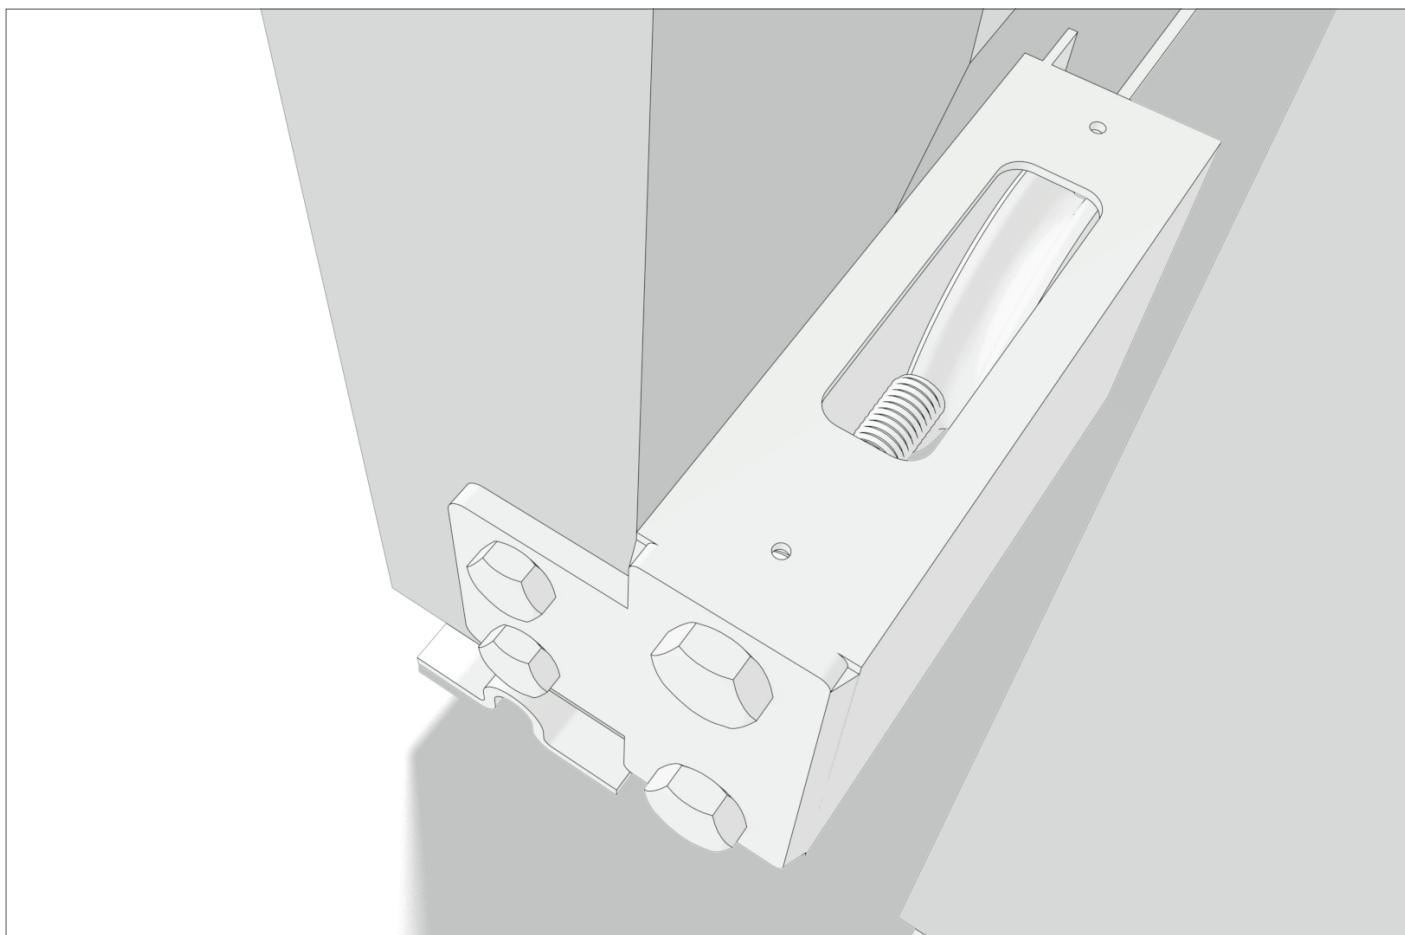 






Set the cable through the pulley boxes.

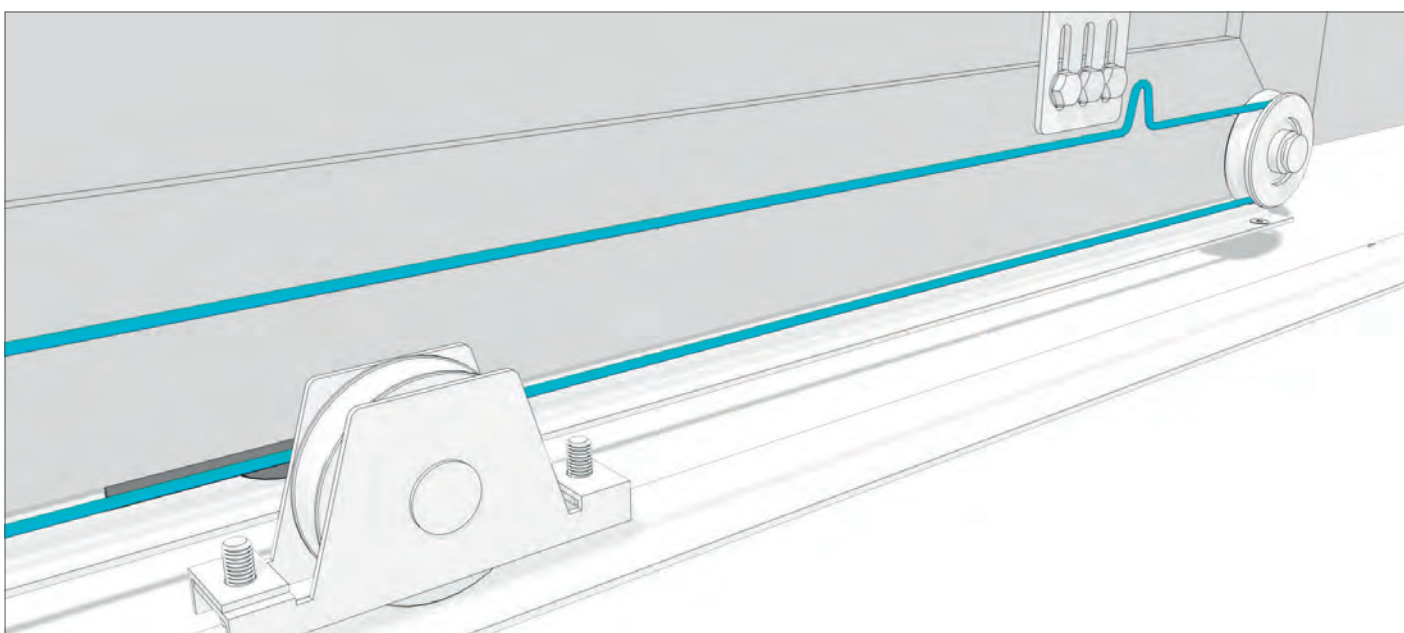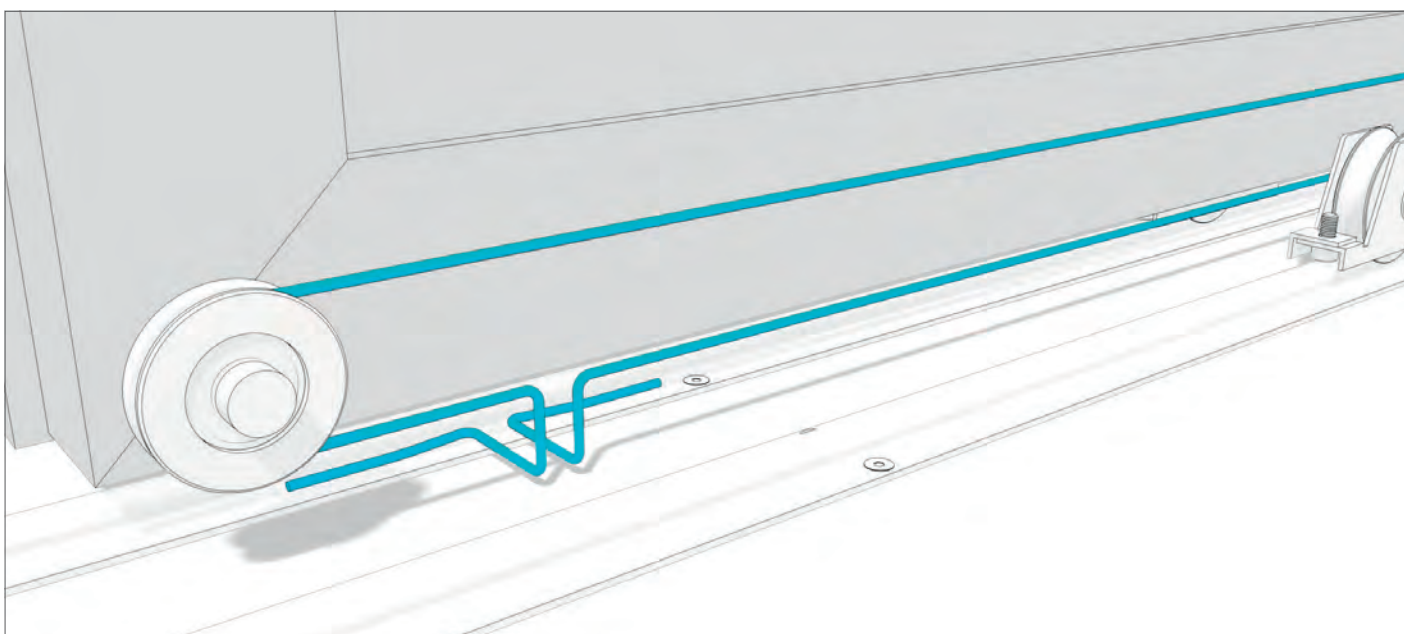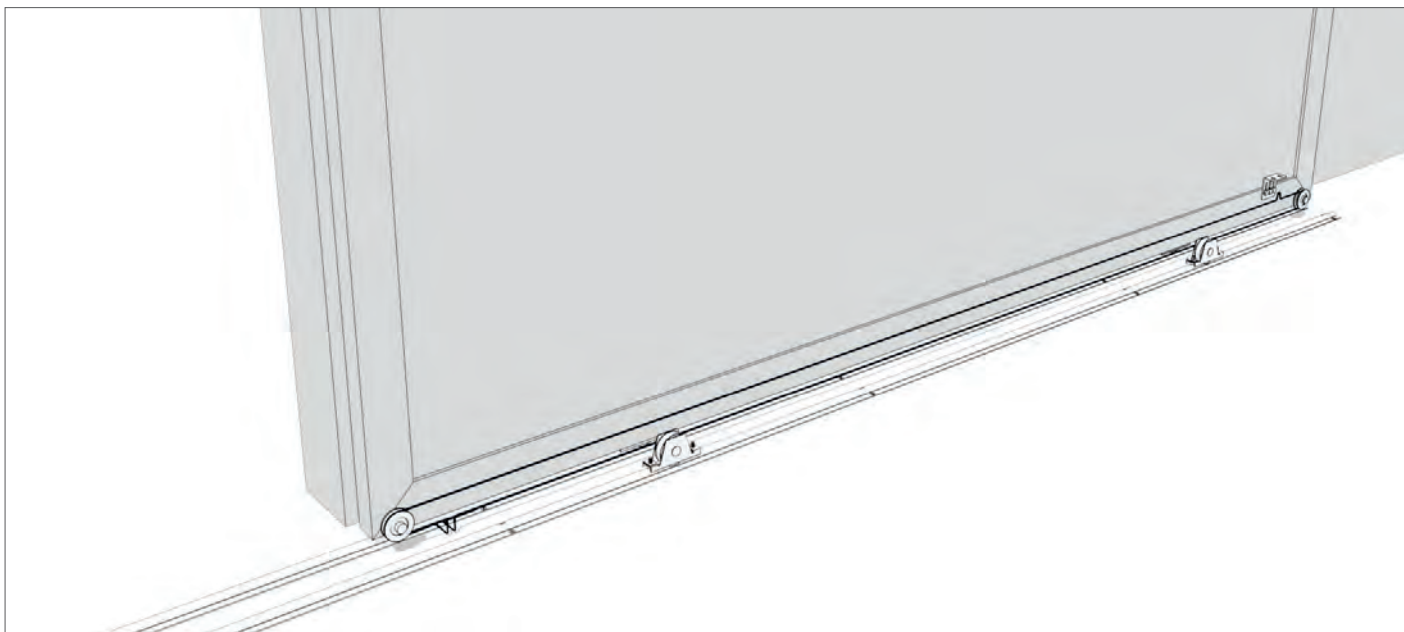   

   
Fix the rear bracket to move the second leaf.

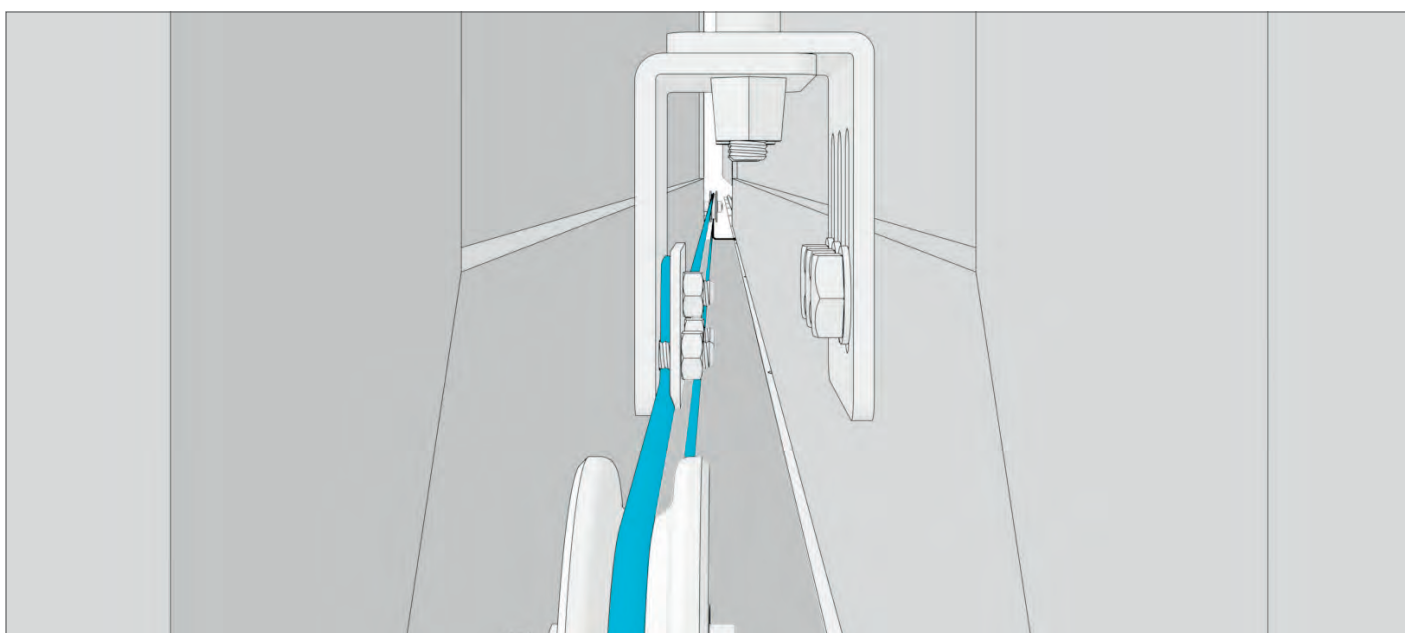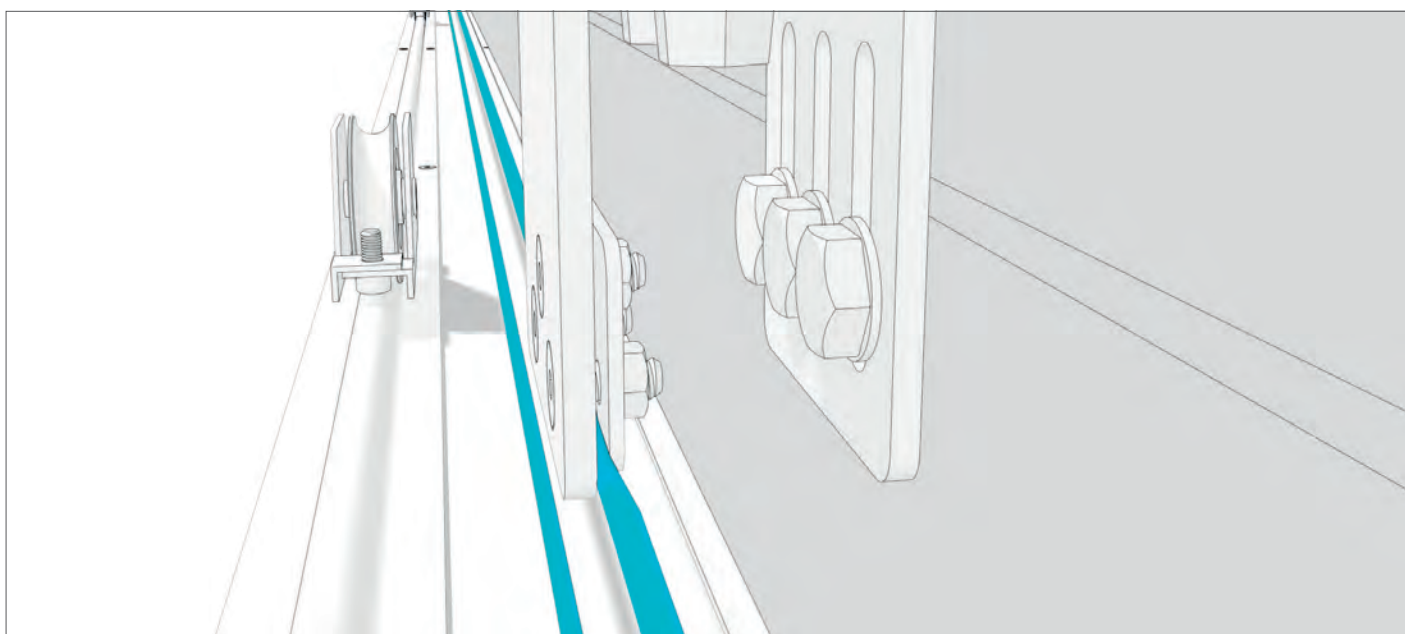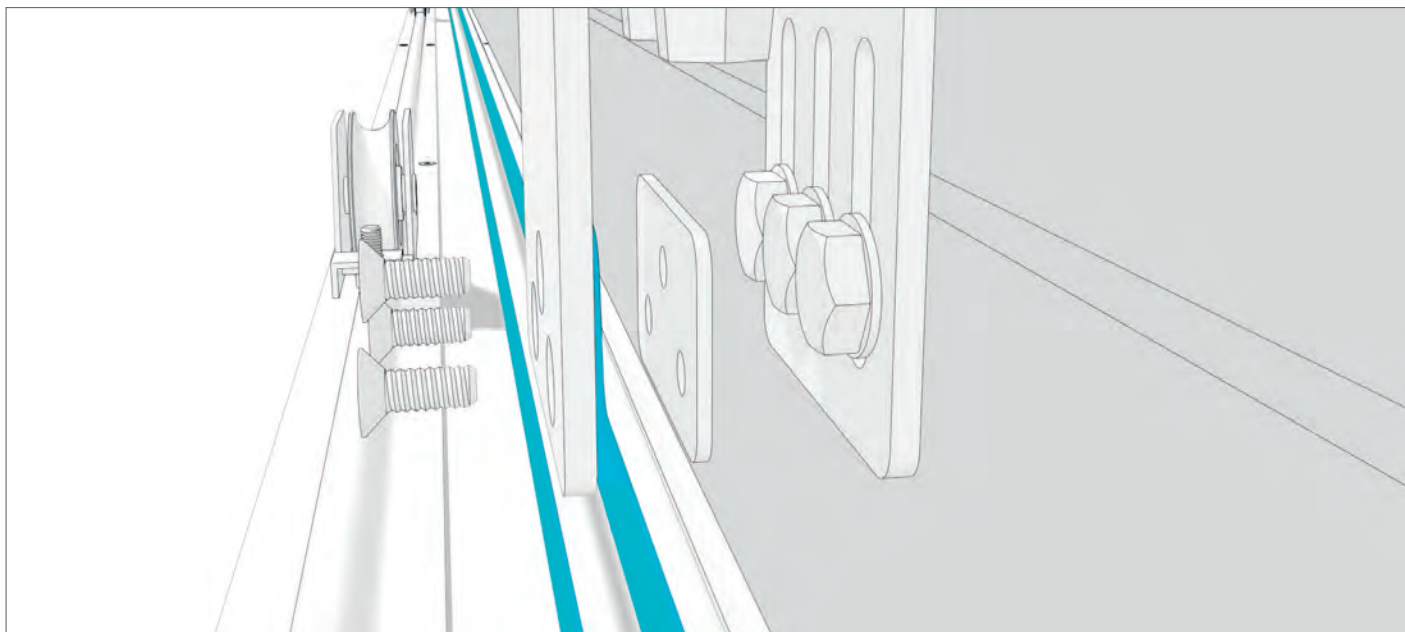

     
Adjust the cable length and fix the bracket onto the floor.

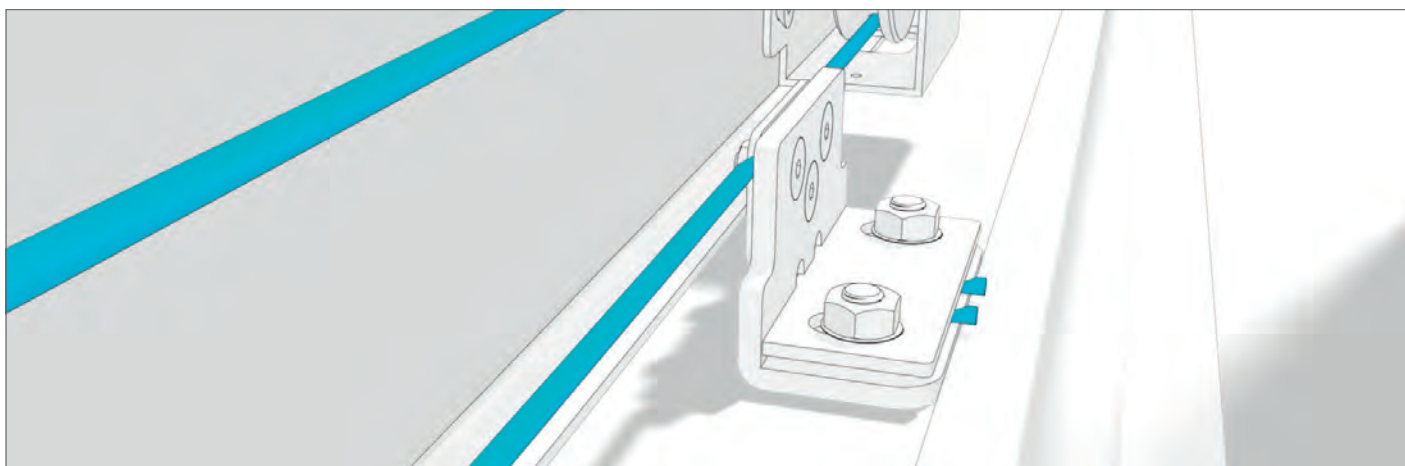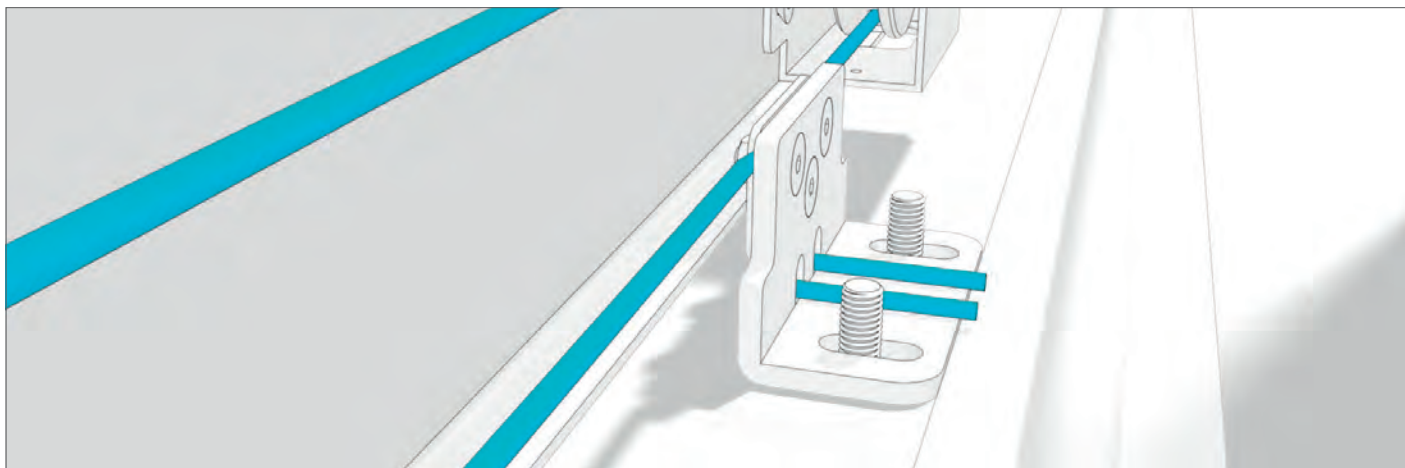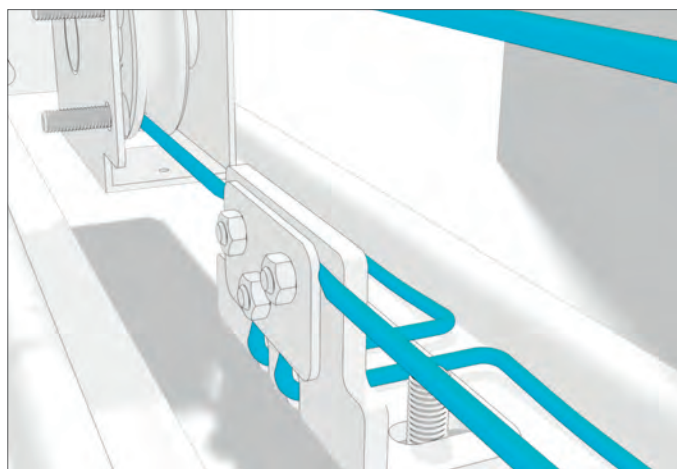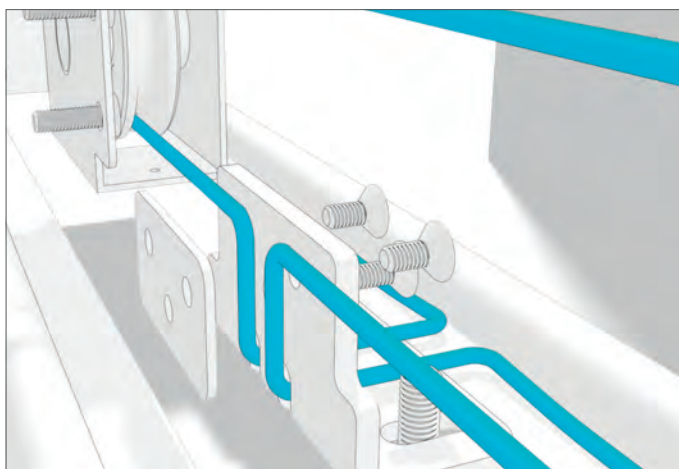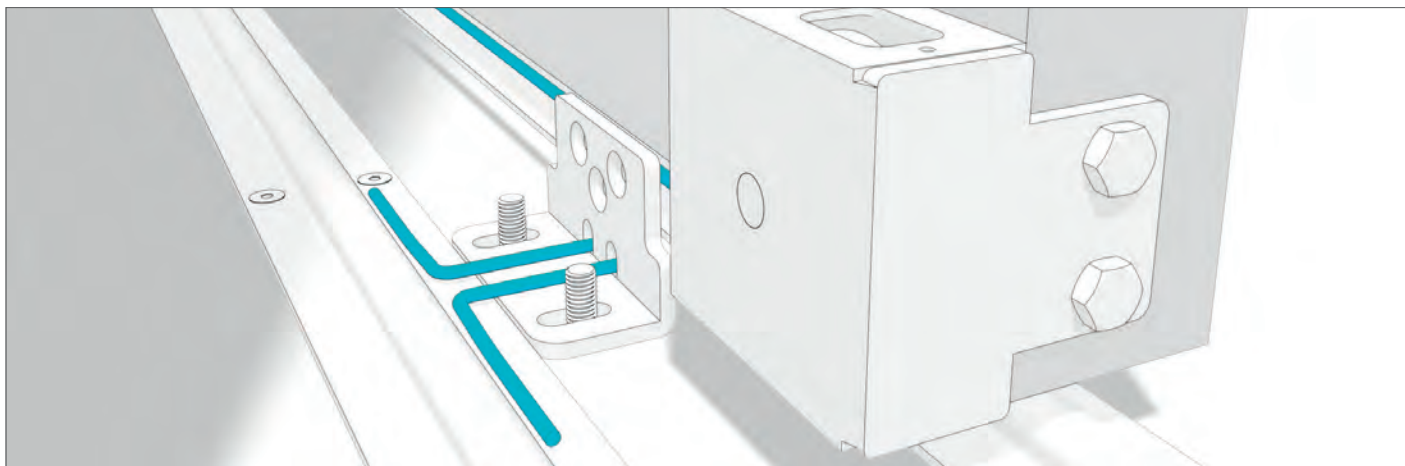


Cable tightening.

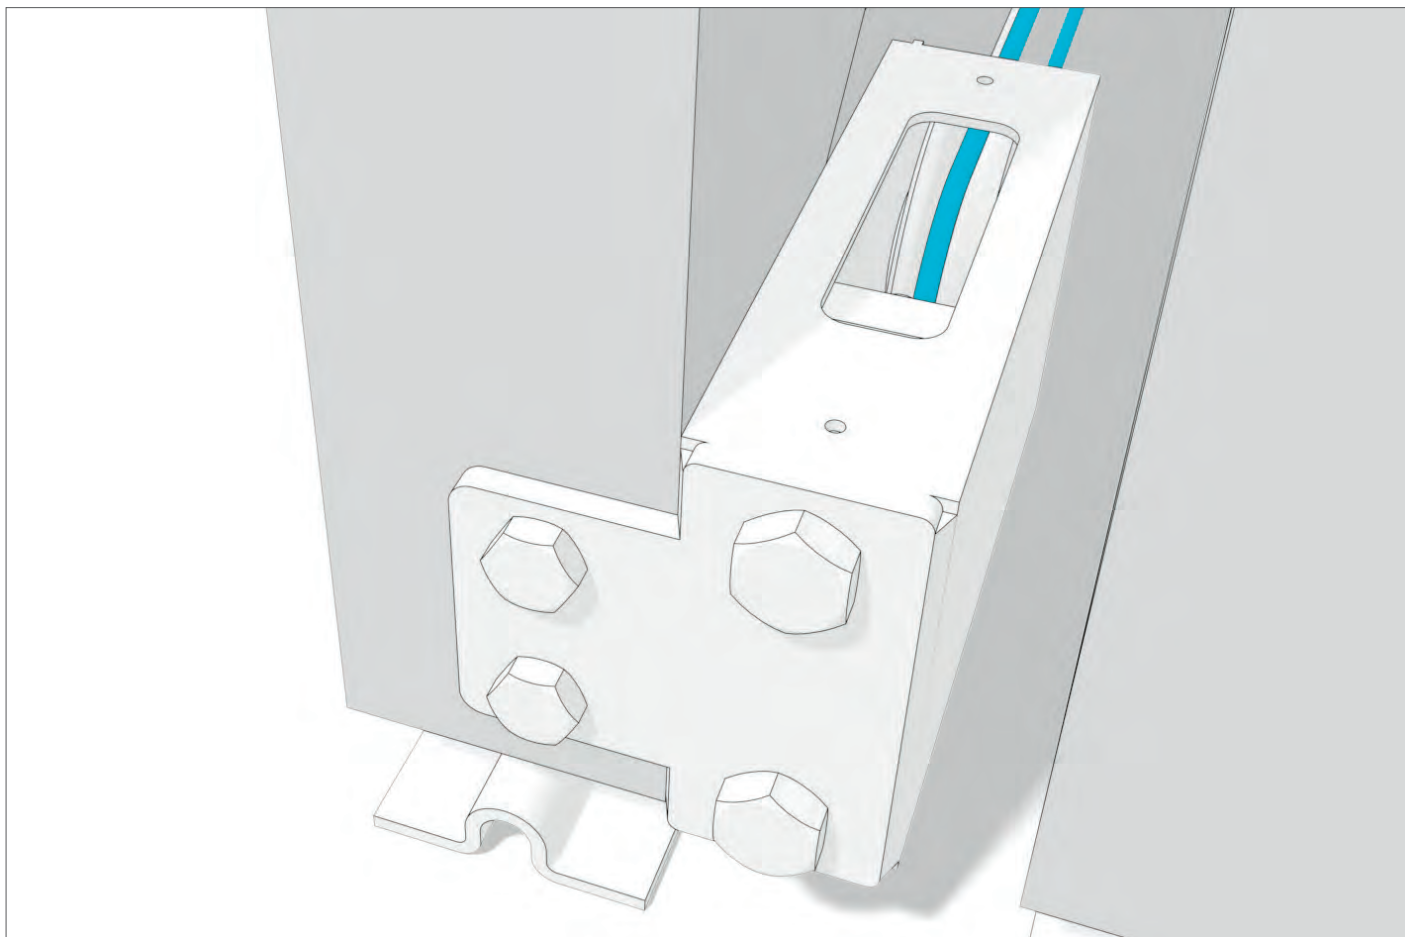 

 
Close the sides of the pulley boxes with the supplied covers.


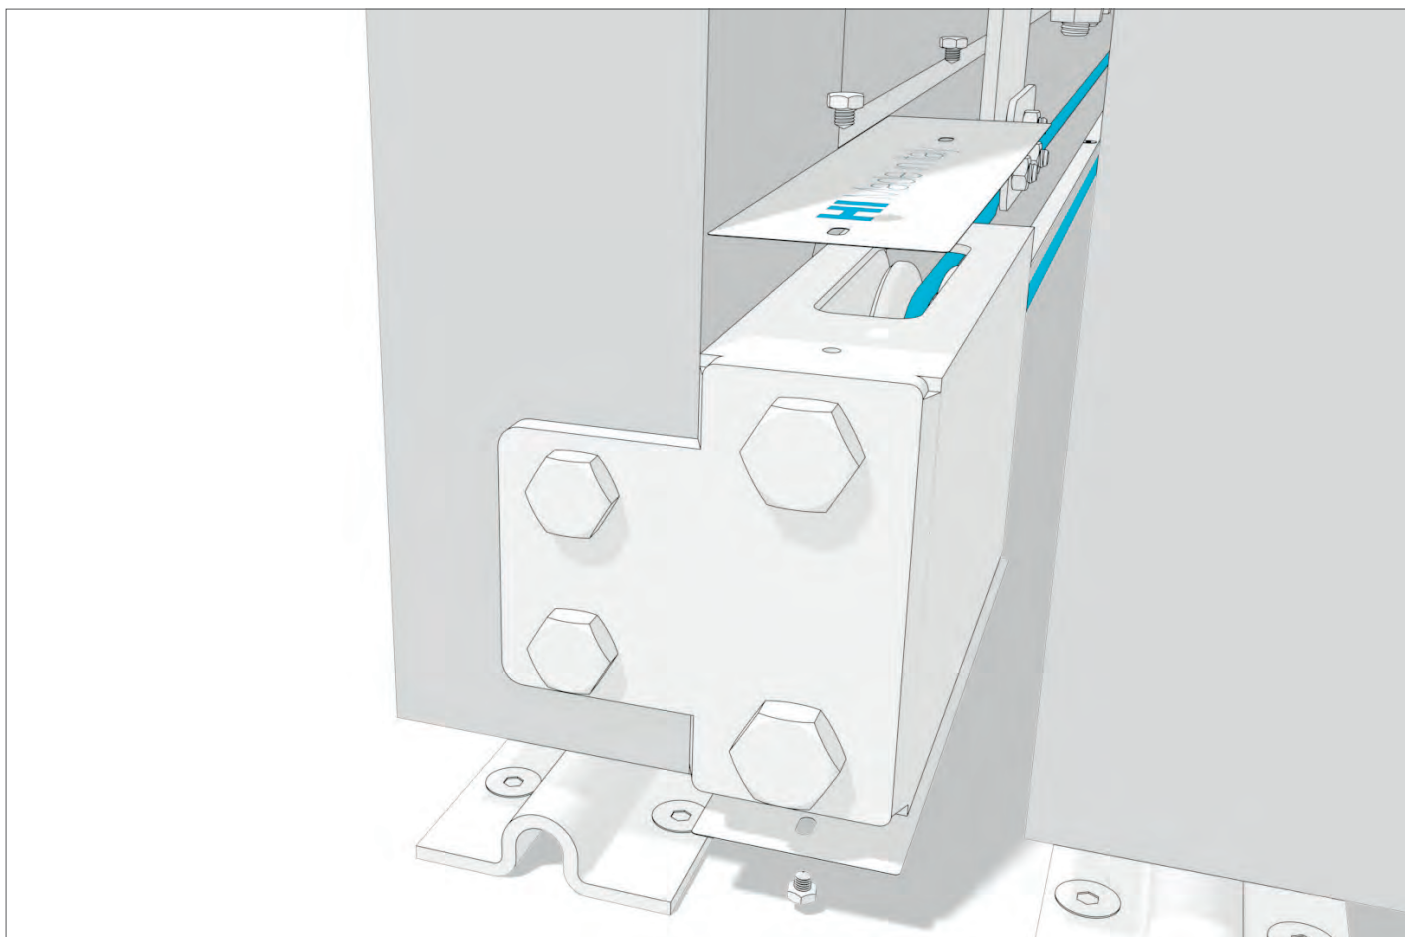


Fix the cover with screws or rivets.

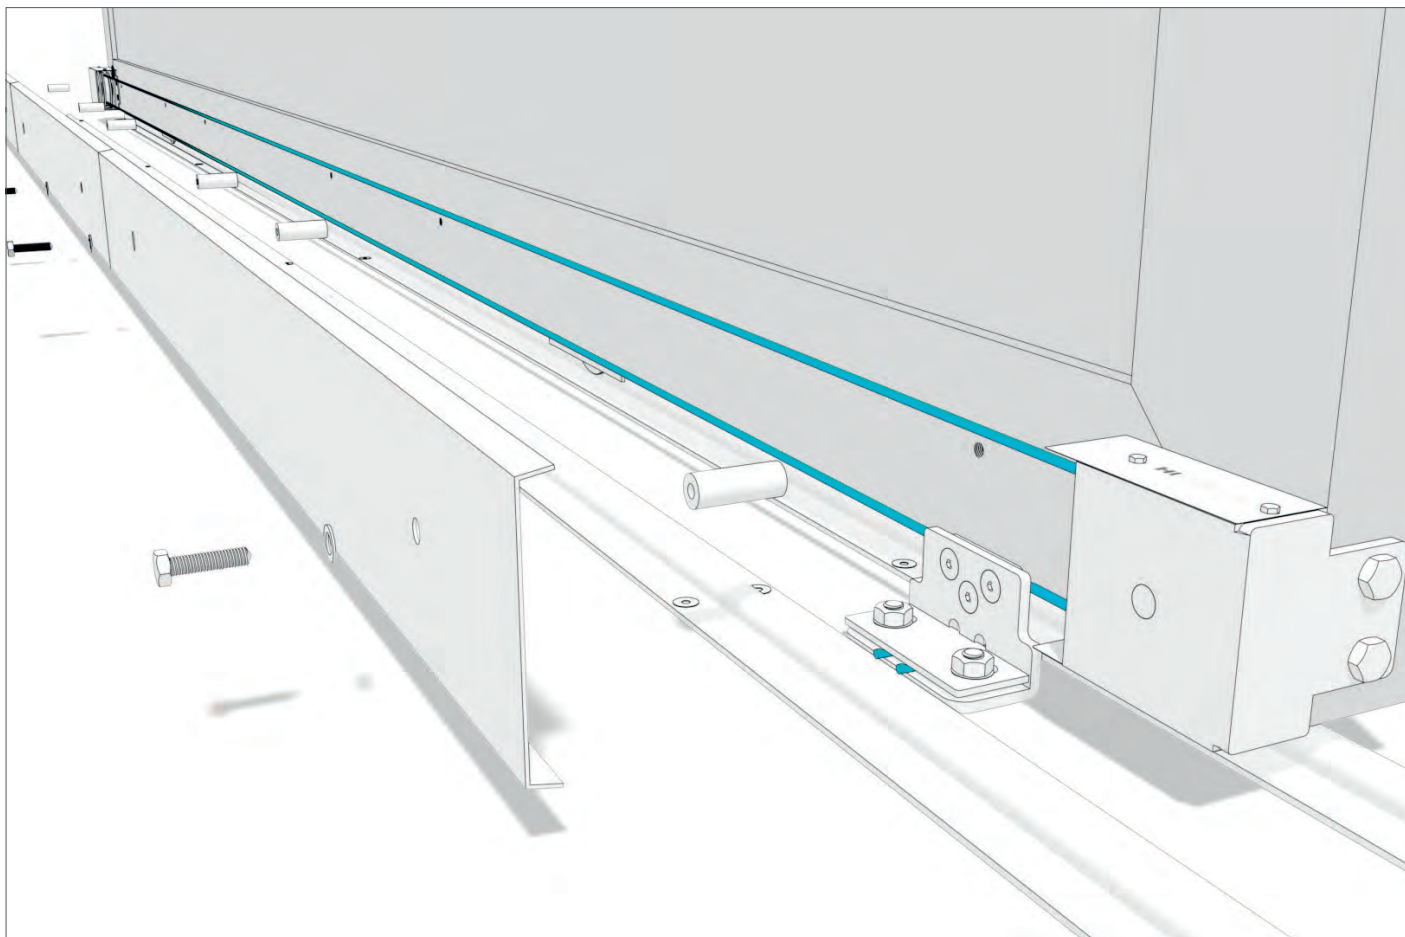 

   Complete the gate with your gate automation.

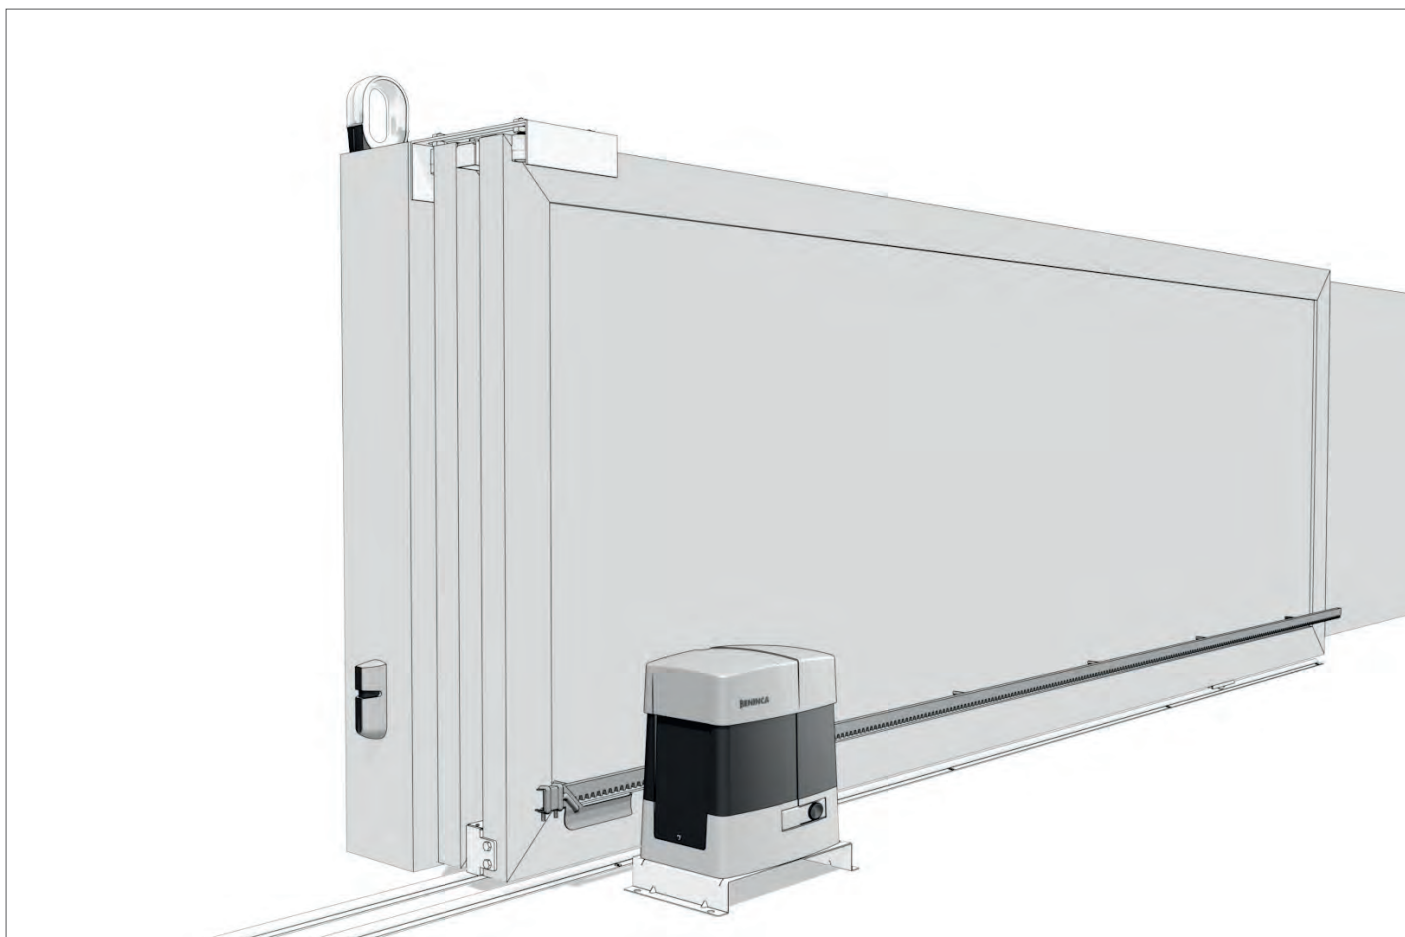

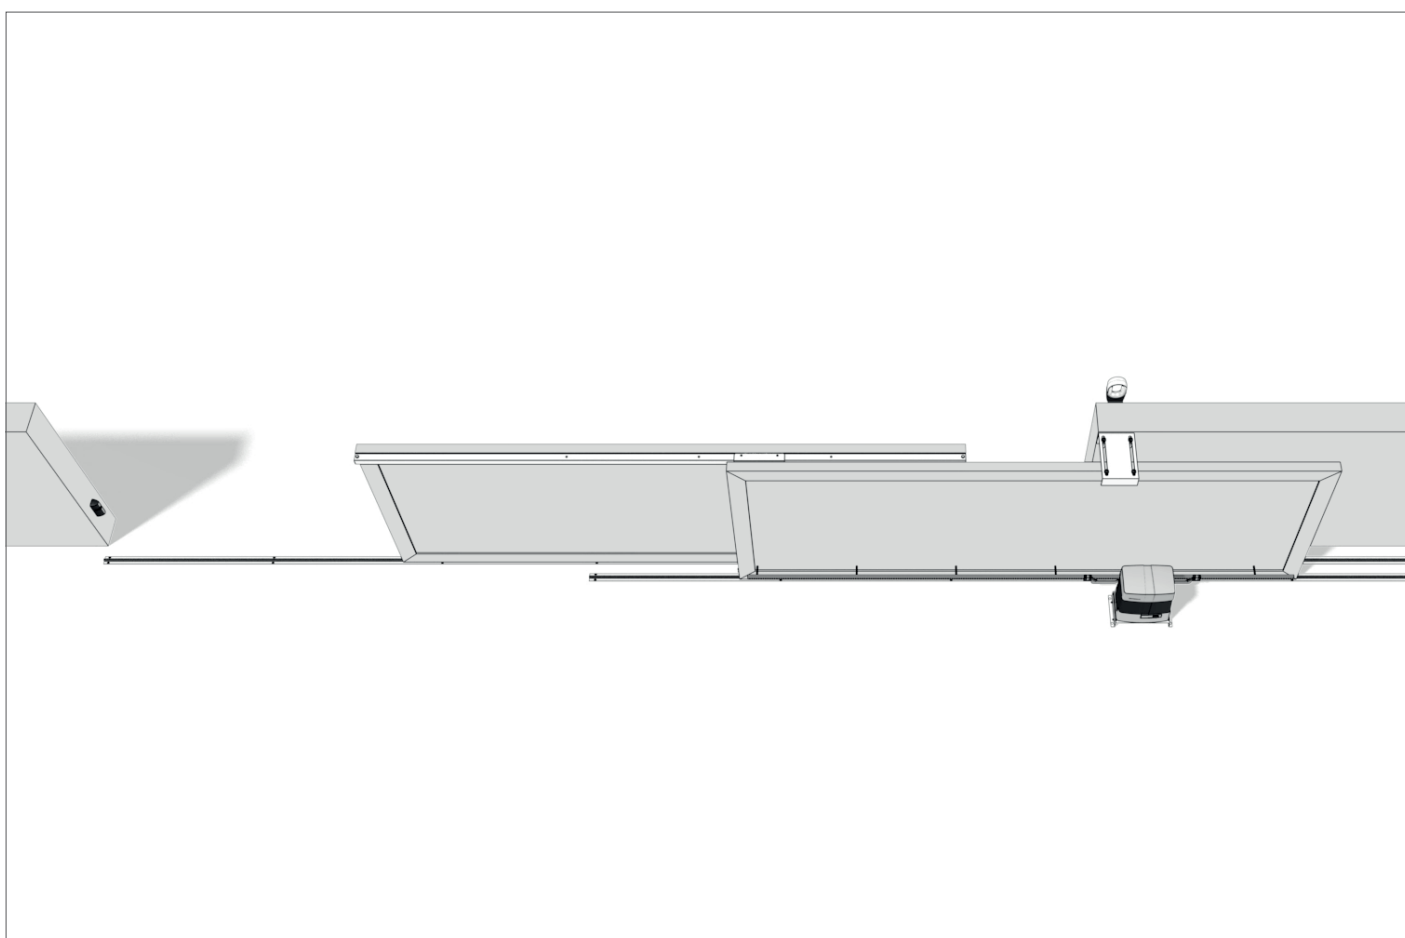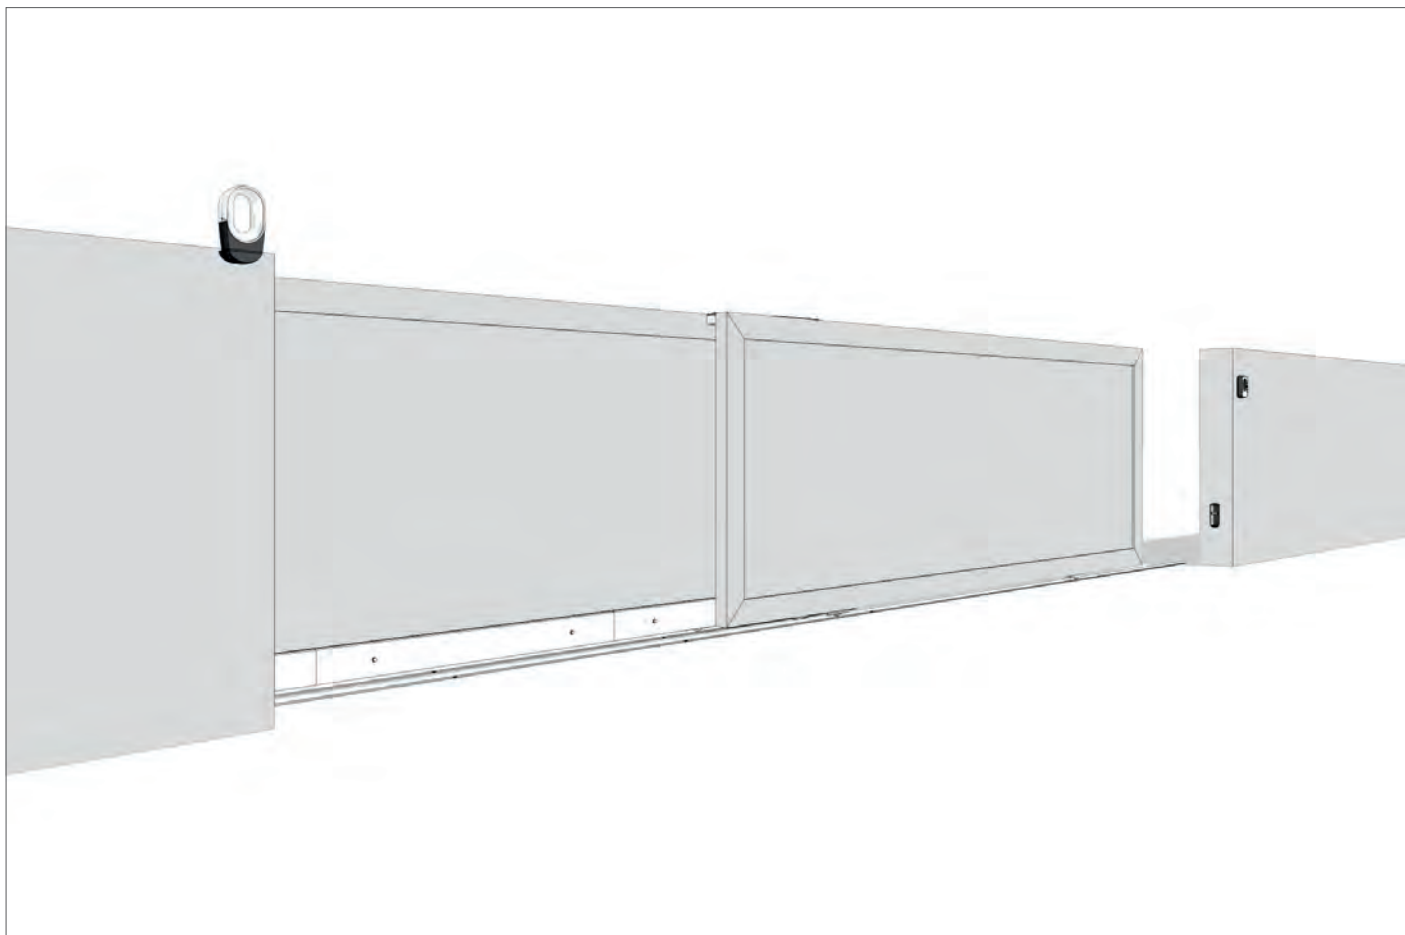



MOTIONS

OPENING SOLUTIONS

HI-MOTIONS Srl

Via dell'Industria, 91
36030 Sarcedo (VI) ITALY
T +39 0445 367536
F +39 0445 367520

info@himotions.it
www.himotions.it